




Impact Pop-up




Impact is complete with magnetic locking arms, mag bars and clip on graphic hanger fittings

features and benefits

- 3 x 3 curved pop-up frame
- Quality anodised finish
- Self-locating 'smart' magnetic locking arms
- Low profile mag bars
- Complete with graphic hanging kit
- Graphic height 2225mm approx
- All front curved / D-end panels are the same size

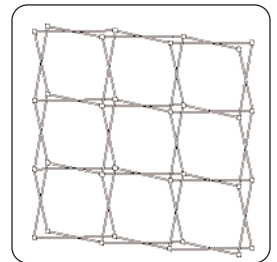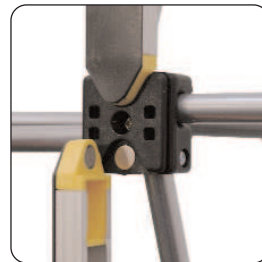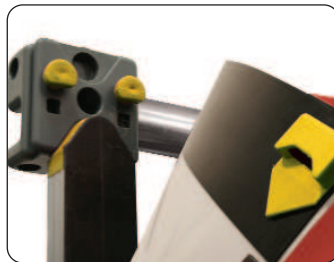

3 x 3 Curved footprint

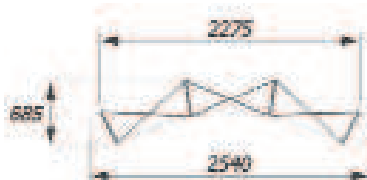

All sizes are in millimeters (mm) and are approx.

Graphic Panel Sizes

Front Curved	D-End Panels	Rear Panels
2225 (h) x 673 (w)	2225 (h) x 673 (w)	2225(h) x 807(w)


All sizes are in millimeters (mm) and are approx.

Single Sided system

18 mag bars, 3 front curved hangers & 2 D-end hangers

Assembly Instructions

Curved Graphic panel finishing

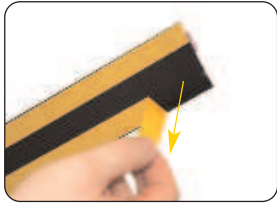

Remove the backing paper from the graphic hanger.



Apply the hanger to the top inside edge of the panel ensuring that it is flush to the panel edge.



Remove the backing paper from the kicker and apply to the bottom edge of the panel.




Remove the backing paper from the mag tape. Apply to both sides of the panel, keeping it flush to the edge.




NB D-End panels do not require kickers.




Curved Pop-up assembly

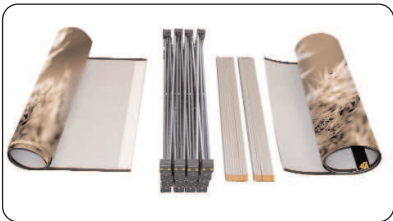


Kit includes: Pop-up frame, Mag Bars, D-end and Front curved graphic panels. (NB graphics are not supplied)

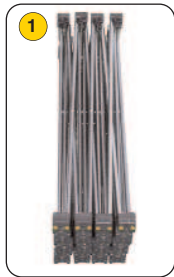

Take the frame, ensuring that the hanging studs are at the top. Stand the frame on the floor (2) and open up (3) until the locking arms lock the frame securely into place (4)

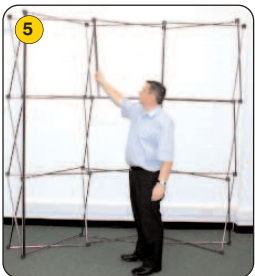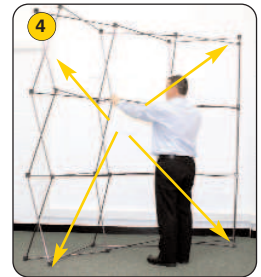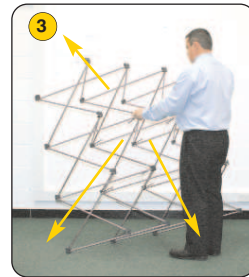

Add the mag bars onto the frame for front and D-ends.

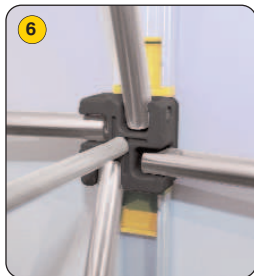


Ensure the mag bars lock onto the magnetic hubs securely.




Unwrap each graphic carefully and attach to the frame.



Carefully hook the top of the graphic onto the studs of the top node.

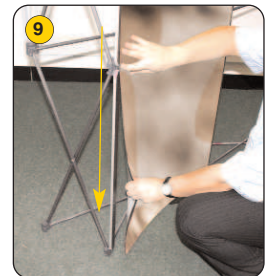

Smooth the graphic onto the mag bars, ensuring that it sits flat and is aligned to the centre line of each mag bar.

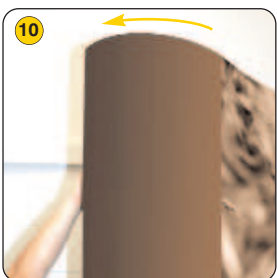

Attach the D-End panel front vertical edge. Curve the graphic round to the back and attach the back vertical edge to complete.



Repeat steps 8 and 9 for the rest of the graphic panels.



Finally, attach the remaining D-End panel.



Important note: Remove all mag bars before collapsing the pop-up frame.